



TOSHIBA

Setting up Chromecast™ built-in TV

The first time you turn on your TV, the initial setup wizard guides you through setting up your TV including the Chromecast built-in setup. You can use either an Android or iOS mobile device to set up your TV.


Note: The setup screens you see may vary if you have additional Chromecast devices in range of your TV.

Using an Android mobile device


- 1 Make sure that you:
 - If your device has a smart network switch option, turn it off under the Wi-Fi menu in the settings app.
 - Install the remote control batteries and connect the power cord.
 - Connect the correct device to watch standard broadcast TV channels using a cable box, satellite box, or external antenna. See your online *User Guide* for instructions.
 - Know the Wi-Fi network name and password if you are using a wireless network to set up your TV.

Note: You can use a wired connection if your TV has an Ethernet jack. You cannot connect to Chromecast built-in with an LTE or 3G network. See your online *User Guide* for instructions.


- 2 Press **⏻** (power) to turn on your TV. The *Set me up* screen opens.

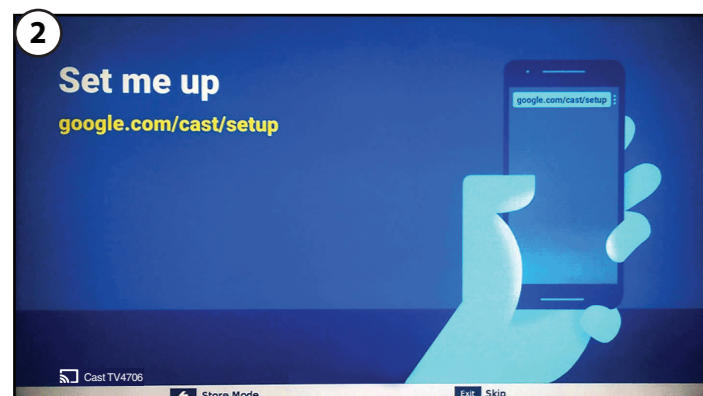

- 3 Type [google.com/cast/setup](https://www.google.com/cast/setup) in the search bar of your device's browser.
- 4 Tap **GET IT ON Google Play**.
- 5 Tap **INSTALL**.
- 6 Tap **OPEN**.
- 7 Tap **ACCEPT** to agree to the *Terms of Service* and *Privacy Policy*.
Note: If you have not turned on Wi-Fi on your device, a message tells you to turn on Wi-Fi.
- 8 Tap **TURN ON LOCATION**.
- 9 Tap **ALLOW**.

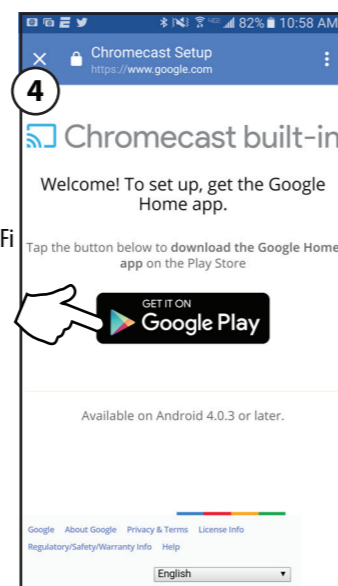


- 10 Your mobile device will now search for Cast TVs in range.

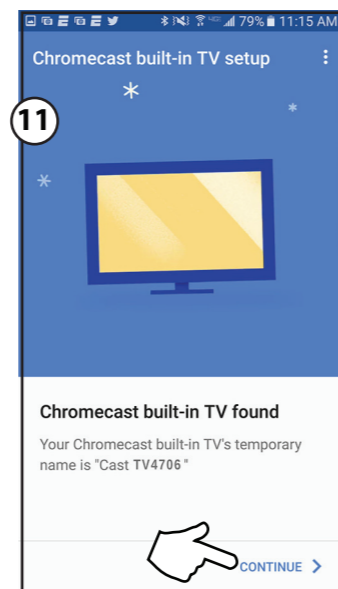


- 11 Tap **CONTINUE** after your device finds your Cast TV.


- 12 Make sure that the codes on your device and TV match, then on your mobile device, tap **I SEE THE CODE**.

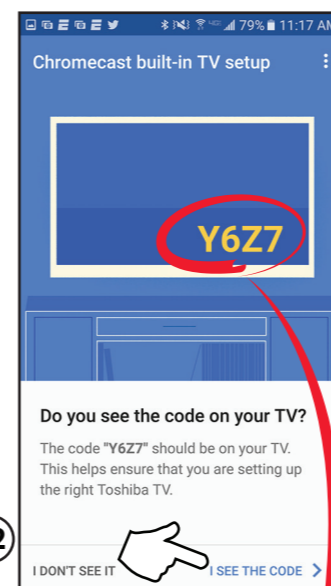

- 13 **Optional:** To change the name of your TV to something distinct, delete the current name, type in a new one, then tap **CONTINUE**.

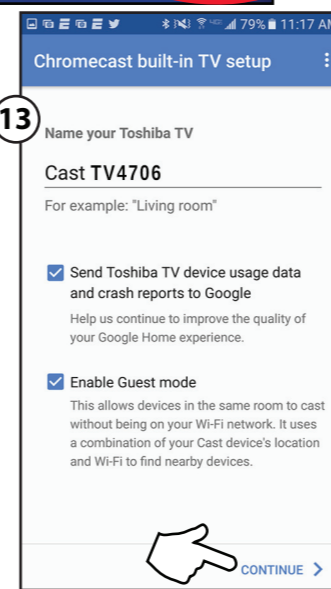

- 14 Choose your Wi-Fi network, enter the Wi-Fi password (if necessary), then tap **CONTINUE**. Your TV connects to the network and is ready to cast.
Note: If your TV receives an update, wait for the update to finish.

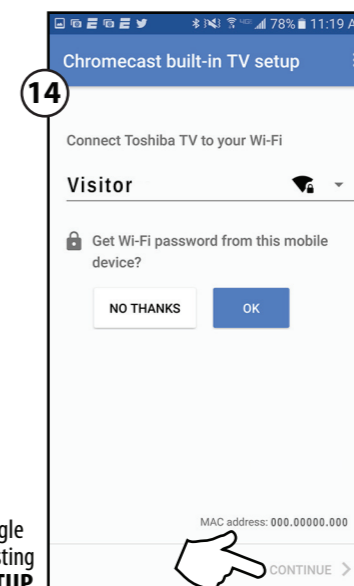


- 15 **Optional:** Sign in to your Google account to personalize your casting experience, or tap **LEAVE SETUP** to start casting right away.

- 16 Tap the slider to turn email notifications on or off, then tap **CONTINUE**.

- 17 Tap **LEARN HOW TO CAST** to go through a tutorial. OR Tap **SKIP** to skip the tutorial.

- 18 Tap **⌘** (Manage your devices) to set up, manage, and control the devices on your network.

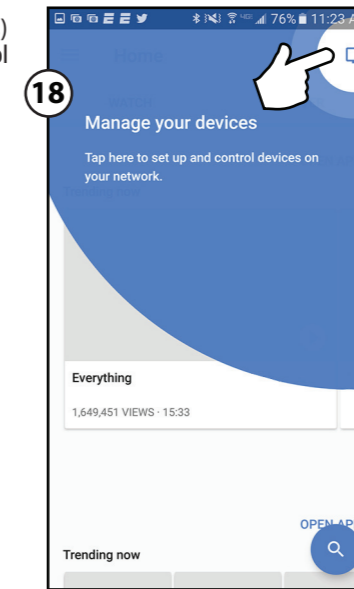

Final flat size: 497.9 × 210.6 mm
Final fold size: 99.5 × 210.6 mm

- If you want to change the settings, see your online *User Guide* for instructions.
- If you connected to cable TV without a box or an external antenna, you may need to set up the antenna/cable jack and scan for channels. For instructions, see your online *User Guide*.

Casting a video, movie, or TV show

- 1 On your mobile device, make sure that Wi-Fi is turned on.
- 2 Open a Chromecast-enabled app.
- 3 Tap the video, movie, or TV program you want to cast, then tap **⌘** (Chromecast button).
- 4 Tap the device you want to cast to.
- 5 To stop casting, tap **⌘**, then tap **STOP CASTING**.






Using an iOS (Apple) mobile device


- 1 Make sure that you:
 - Turn off the smart network switch option called "Wi-Fi Assist" under Settings > Cellular.
 - Install the remote control batteries and connect the power cord.
 - Connect the correct device to watch standard broadcast TV channels using a cable box, satellite box, or external antenna. See your online *User Guide* for instructions.
 - Know the Wi-Fi network name and password if you are using a wireless network to set up your TV.

Note: You can use a wired connection if your TV has an Ethernet jack. You cannot connect to Chromecast built-in with an LTE or 3G network. See your online *User Guide* for instructions.


- 2 Turn on Wi-Fi on your mobile device and connect it to your home Wi-Fi network.
- 3 Turn on Bluetooth on your mobile device.
- 4 Press to turn on your TV. The *Set me up* screen opens.

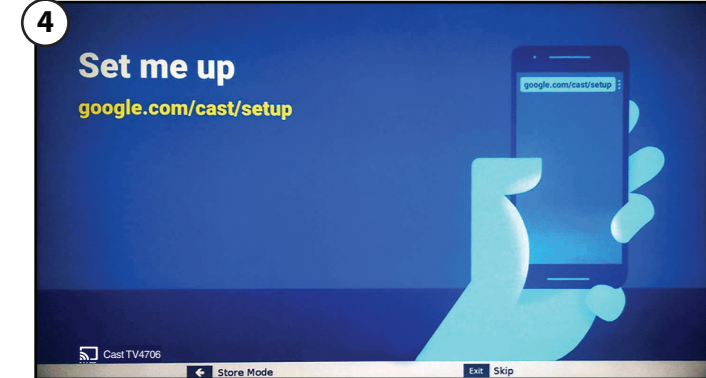



- 5 Type [google.com/cast/setup](https://www.google.com/cast/setup) in the search bar of your device's browser.
- 6 Tap **Download on the App Store.**
- 7 Tap **GET.**
- 8 Tap **OPEN.**
- 9 Tap **ACCEPT** to agree to the *Terms of Service* and *Privacy Policy*.
Note: If you have not turned on Wi-Fi on your device, a message tells you to turn on Wi-Fi.
- 10 Your mobile device will now search for Cast TVs in range.

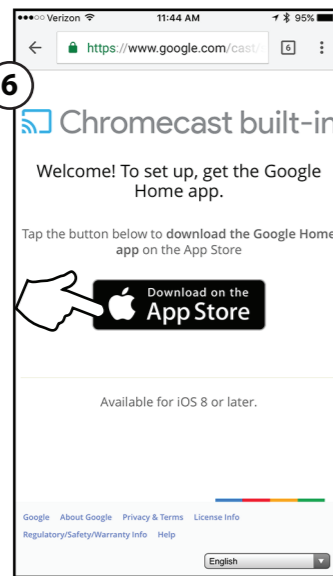

- 11 Tap **CONTINUE** after your mobile device finds your Cast TV.

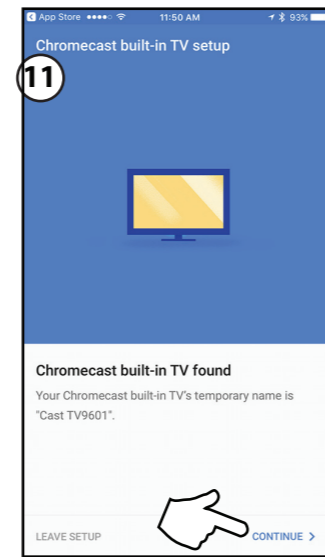


- 12 Make sure that the codes on your device and TV match, then on your mobile device, tap **I SEE IT.**

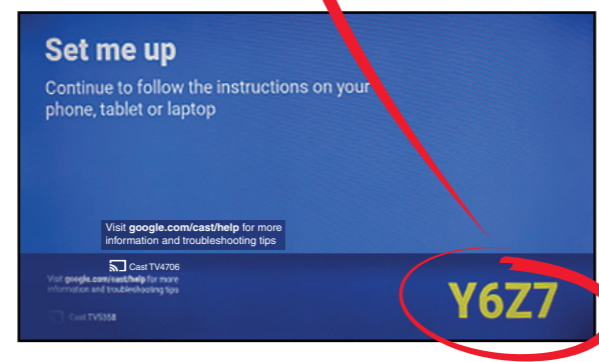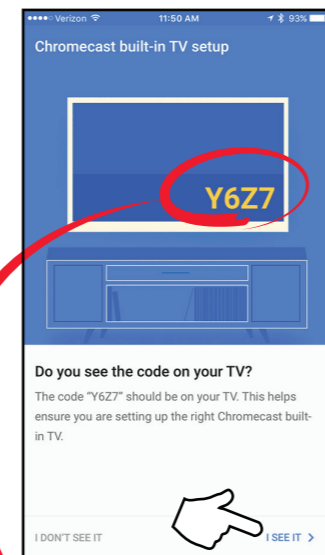

- 13 Select your region, and then tap **CONTINUE.**




- 14 **Optional:** To change the name of your TV to something distinct, delete the current name, type in a new one, then tap **CONTINUE.**

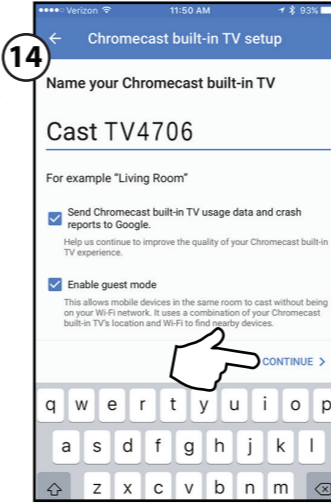

- 15 Choose your Wi-Fi network, enter the Wi-Fi password (if necessary), then tap **CONTINUE.**

Note: If your TV receives an update, wait for the update to finish.

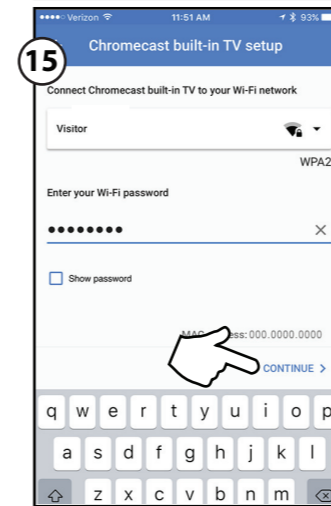


- 16 Sign in to your Google account to personalize your casting experience, or tap **SKIP** to start casting right away.

- 17 Tap the slider to turn email notifications on or off, then tap **CONTINUE.**

- 18 Tap **LEARN TO CAST** to go through a tutorial. OR Tap **SKIP** to skip the tutorial.

- 19 Tap (Manage your devices) to set up, manage, and control the devices on your network.

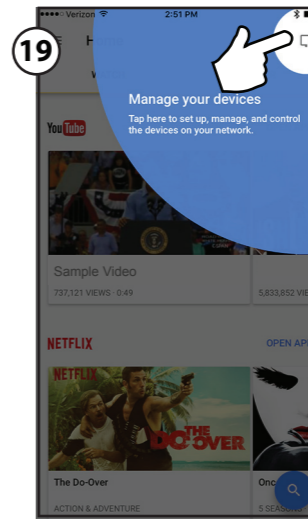

Casting a video, movie, or TV show

- 1 On your mobile device, make sure that Wi-Fi is turned on.
- 2 Open a Chromecast-enabled app.
- 3 Tap the video, movie, or TV program you want to cast, then tap (Chromecast button).
- 4 Tap the device you want to cast to.
- 5 To stop casting, tap , then tap **Stop casting.**

Chromecast is a trademark of Google inc. Distributed and warranted by Best Buy Purchasing LLC (7601 Penn Avenue South, Richfield, MN 55423 USA) **Made in China**

- If you want to change the settings, see your online *User Guide* for instructions.
- If you connected to cable TV without a box or an external antenna, you may need to set up the antenna/cable jack and scan for channels. For instructions, see your online *User Guide*.

